


## Pyrobox and Powerbox

Use this interfaces to connect your pyroelectric or thermopile detector directly to your PC. It's simple to program and drivers for the most operating systems are available.

- USB 2.0 connection
- Power supply from USB
- Labview based software for different applications available (Analogue and digital display, data logger, statistics)
- Data transfer as ASCII code

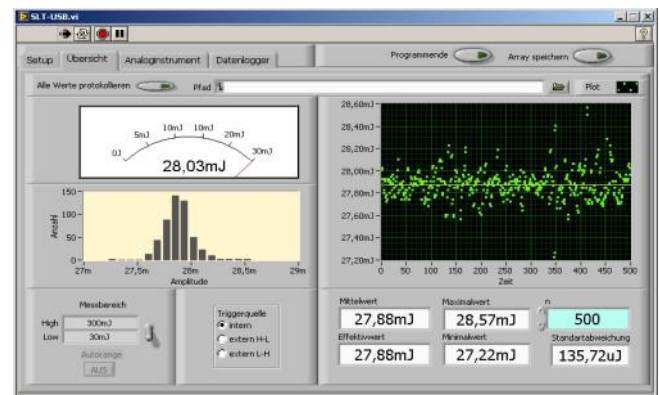

### Powerbox:

- For all thermopile detectors
- Compatible with E-connector
- Four ranges
- On request with RS232 output
- For BNC-Input choose Powerbox –OEM
- Dimensions 110 mm x 62 mm x 30 mm

### Pyrobox:

- For all PEM detectors
- Two ranges
- Max. rep. rate 100 pps
- Additional external trigger input
- Dimensions 90 mm x 62 mm x 30 mm